



Parts Included:

- Foot Pegs
- Cotter Pins

Hardware Included:

- Cotter Pins (2)


Remove the cotter pin securing the pivot pin and remove the washer. Push out pin and remove factory peg. Use caution as the spring is under tension and may pop out.



Install the factory spring in the foot peg.



Install the peg by securing the spring with your thumb. Press the peg into the lug and using a punch or a screwdriver from the bottom of the peg push it through the lug, peg and the center of the spring.

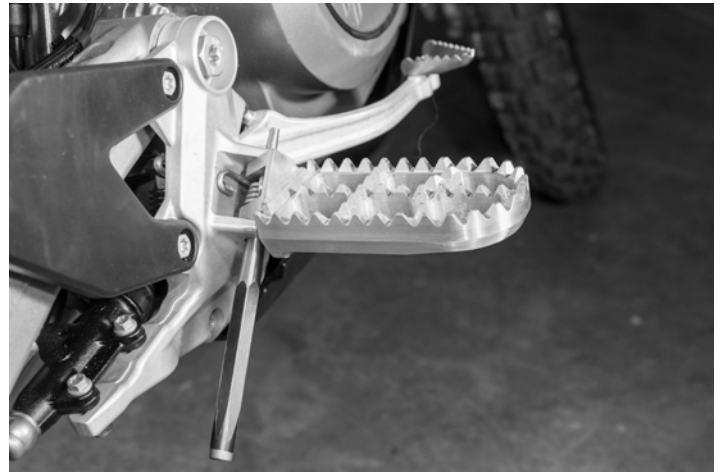

Install the factory pivot pin while slowly pushing out the punch/screwdriver. Reinstall the washer and cotter pin. Fold over the legs on the cotter pin.
