**Parts Included:**

- Foot Peg (right)
- Foot Peg (left)


Hardware Included:

- Cotter Pins (2)

Remove the cotter pin securing the pivot pin. Push out pin and remove factory peg.



Install the factory spring in the foot peg with the short straight leg facing out.

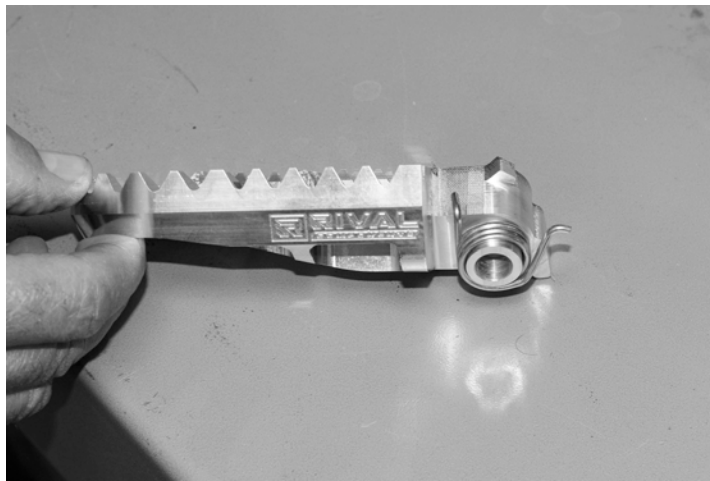

Install the peg with the straight leg over the foot peg lug. Replace the peg and reinstall the provided cotter pin and fold the legs back over the pin.

