

INSTALLATION INSTRUCTIONS

MAKE: BMW

MODEL: F750/850 GS, 1250 GS YEAR: 2019-21





Parts Included:

Foot Pegs


Hardware Included:

- Circlip (2)
- Spring (2)

Remove the circlip securing the pivot pin. Push out pin and remove factory peg. The factory spring and bushing will not be reused.



Install the supplied spring in the foot peg. Reinstall the pivot pin and secure with a circlip. Repeat on the other side.

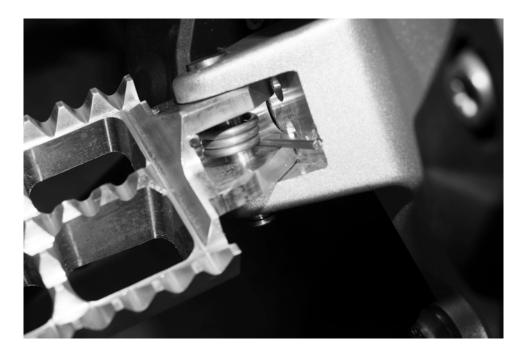

Thank you for choosing Rival Components.