

INSTALLATION INSTRUCTIONS**MAKE:** KTM/Husqvarna**MODEL:** KTM 690/Husqvarna 701**YEAR:** 2019-20 (KTM)/2017-20 (Husqvarna)**Crash Bars****Parts Included:**

- Left Crash Bar
- Right Crash Bar
- Cross Bar

Hardware Included:

- 10mm x 45mm Bolt (4)
- 6mm Bolt (4)
- 6mm Nyloc Nut (4)
- 6mm Flat Washer (8)
- 10mm Spacers (4)

1. Remove the two torx bolt on the left side of the frame.
2. Install the two spacers in the frame.



3. Install the left side crash bar using the two supplied 10mm x 45mm bolts, make finger tight, at this time.



4. Remove the two torx bolts on the right side of the frame.

5. Install the two spacers in the frame.




6. Install the right side crash bar using the two supplied 10mm x 45mm bolts, make finger tight at this time.



7. Mount the cross bar as shown using the four supplied 6mm bolts, washers, and lock nuts, make finger tight at this time.



8. Tighten the two right and two left 10mm bolts securing the crash bars to the frame using a 17mm socket, or wrench.

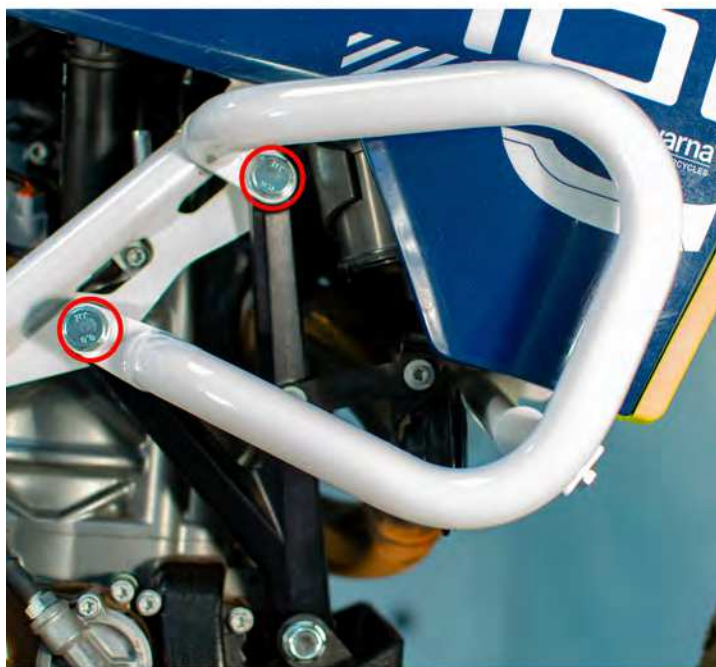

9. Adjust the crossover brace so it has adequate clearance and tighten the four 6mm nuts and bolts using a 10mm socket, and wrench.
