


Parts Included:

- Foot Pegs
- Cotter Pins


Hardware Included:

- Cotter Pins (2)


Remove the cotter pin securing the pivot pin and remove washer and o-ring.. Push out pin and remove factory peg.

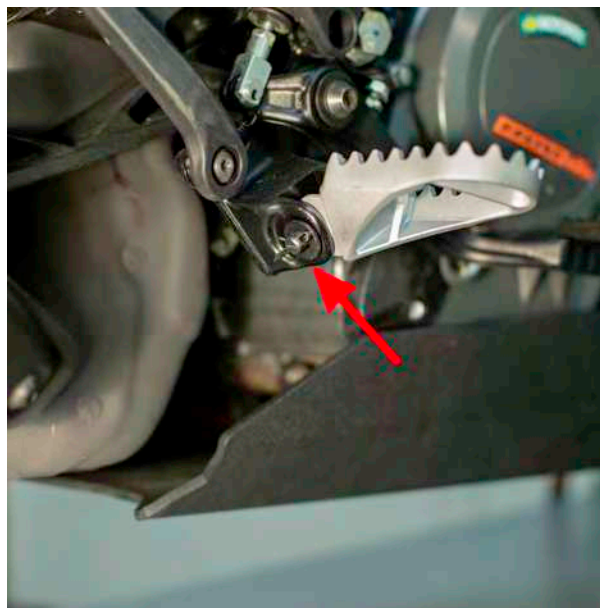



Install the factory spring in the foot peg with the straight leg facing out.

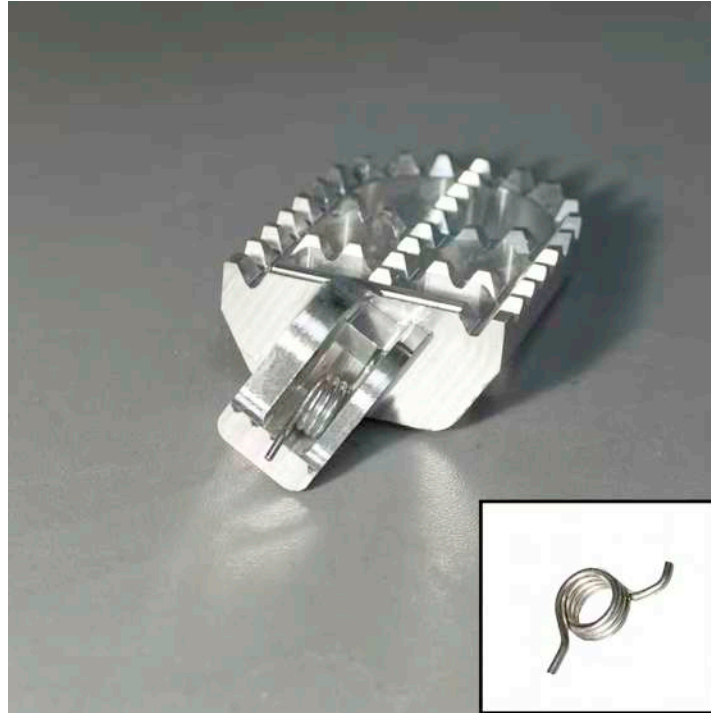

Install the peg with the straight leg in the hole on the foot peg lug.

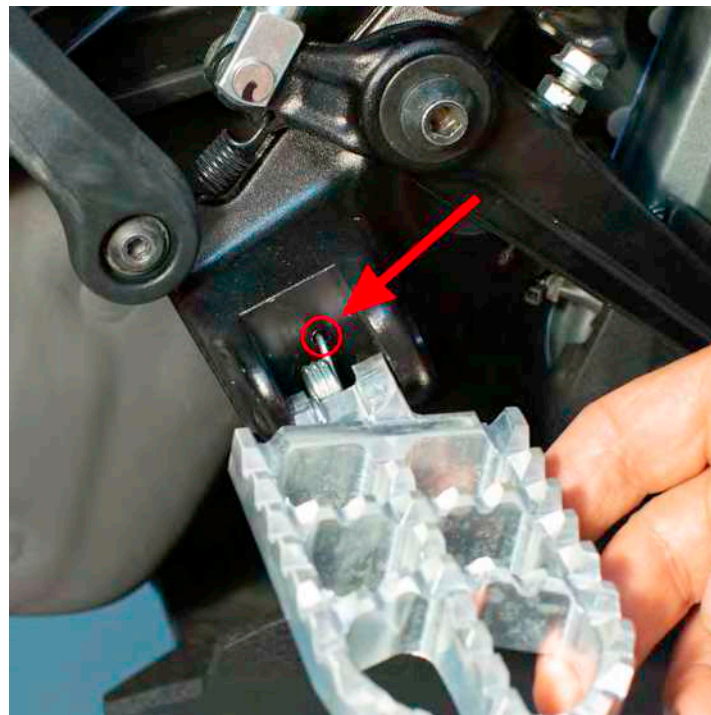

Install the factory pivot pin with the original o-ring and washer stacking the o-ring on the pivot pin first then the washer then install the cotter pin and bend the legs over to secure the pin.

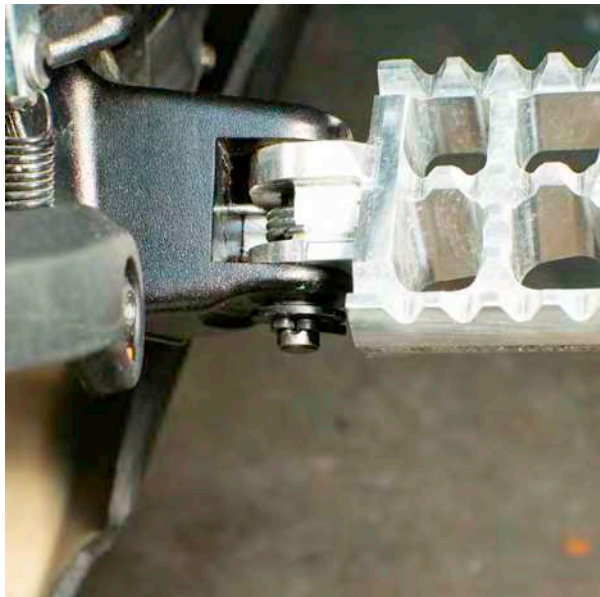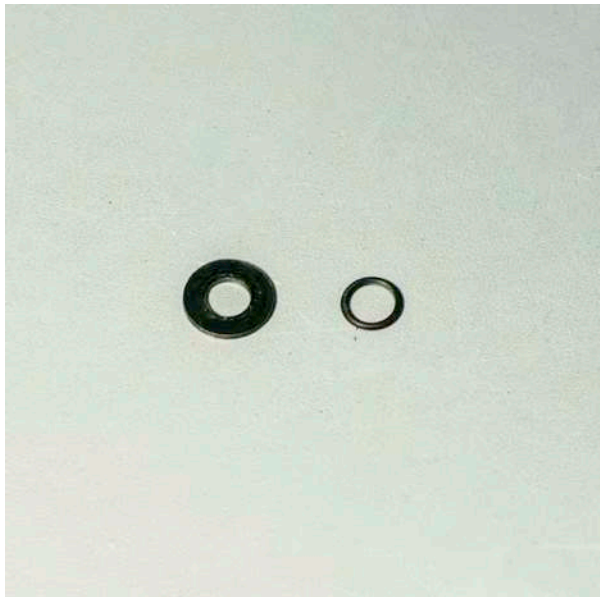

Optional step: You can adjust the brake and shifter position to better fit the repositioned pegs.

Thank you for choosing Rival Components. Enjoy your ride!